



































Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 VCR	 Smart
 DVD	 Media
 Input	 AV
 1/Tracking-	 1
 2	 2
 3/Tracking+	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 System	 D. Menu
 Clear	 Exit

Originale	Sostituto
 Setup	 Options
 Display	 Info
 Title/PBC	 Back
 Menu	 Menu
 Up/PR+	 Up
 Down/PR-	 Down
 Right	 Right
 Left	 Left
 OK/Enter	 Ok
 Subtitle	 Subt
 Audio	 Dual
 Search	 Shift + TV/R
 Zoom	 Shift + Eject
 <<	 <<
 Play	 Play
 Pause	 Pause
 >>	 >>





Originale	Sostituto	Originale	Sostituto
 I<<	 I<<		
 Stop	 Stop		
 >>I	 >>I		
 Rec	 Rec		
 Speed	 Format		
 Repeat	 Text		
 A-B	 Red		
 Tv/VCR	 TV/R		
 3D	 3D		
 Mark	 List		
 Angle	 Guide		
 CM Skip	 Yellow		
 Replay	 Green		
 Last CH	 Pre Ch		
 Program	 Sleep		

Originale	Sostituto

