 




Originale	Sostituto
 Power	 Power
 Search	 Source
 Computer	 Comp / Video
 S-Video	 Eco / Aspect
 Video	 Volt / Focus
 USB Display	 Shift + Source
 HDMI	 Shift + Up
 Slideshow	 3D / Invert
 A/V Mute	 Blank / Mute
 Freeze	 Freeze / Timer
 Auto	 Auto
 Aspect	 Mode
 Color Mode	 Shift + Mode
 1	 Shift + + / Play
 2	 Shift + Volt / Focus
 3	 Shift + - / Stop
 4	 Shift + Help / Info






 


Info

Originale	Sostituto
 5	 Shift + Eco / Aspect
 6	 Shift + 3D /
 7	 Shift + Blank / Mute
 8	 Shift + Auto
 9	 Shift + Freeze / Timer
 0	 Shift + Comp / Video
 ?/Help	 Help / Info
 Page Down	 Shift + Vol - / Page -
 Page Up	 Shift + Vol + / Page +
 E-Zoom-	 - / Stop
 E-Zoom+	 + / Play
 Vol-	 Vol - / Page -
 Vol+	 Vol + / Page +
 Menu	 Menu
 Esc	 Shift + Power
 Up	 Up
 Down	 Down





Originale **Sostituto**

	Right		Right
	Left		Left
	Enter		Enter
			Shift + Right
			Shift + Left

Originale **Sostituto**

