 

 

 
 
 
 




 
 


 

 


 

 


 
 

 

 
 
 
 
 
 
 


 

 

 



 

 

 



 

 
 


 
 


 





 
 


 








 







 
 
 
 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Menu	 Menu
 Tv/AV	 AV	 Sound	 Dual
 Mute	 Mute	 Picture	 Format
 Timer	 Shift + AV	 ▼ A-B	 Options
 [.]/[≡?]	 3D	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 [≡◆]/Bass	 Subt
 0	 0	 TXT/TV	 Text
 -/-/[≡0]	 Guide	 S.SYS	 Smart
 P=P/[≡+]	 Pre Ch	 Surround	 List

Originale	Sostituto	Originale	Sostituto
 Menu	 Menu	 Sound	 Dual
 Picture	 Format	 ▼ A-B	 Options
 CH+	 Ch +	 CH-	 Ch -
 Up	 Up	 Down	 Down
 Right	 Right	 Left	 Left
 OK	 Ok	 Vol+	 Vol +
 Vol-	 Vol -	 [≡◆]/Bass	 Subt
 TXT/TV	 Text	 S.SYS	 Smart
 Surround	 List		





Originale		Sostituto		Originale		Sostituto	
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

