

 

 

 
 
 
 
 




 
 




| Originale | Sostituto |
|---|--|
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Cancel |  D. Menu |
|  Audio |  Dual |
|  Vol + |  Vol + |
|  Vol - |  Vol - |
|  Mute |  Mute |
|  Disc/SD |  AV |

| Originale | Sostituto |
|--|---|
|  iPod/Radio/Ext-In |  TV/R |
|  PIP |  3D |
|  << Search/Slow |  << |
|  Play |  Play |
|  Search/Slow >> |  >> |
|  I<< Skip/↓ |  I<< |
|  Pause |  Pause |
|  Skip >>I↑ |  >>I |
|  Stop |  Stop |
|  Status |  List |
|  Exit |  Exit |
|  Viera Cast |  Media |
|  Home |  Smart |
|  Pop-Up Menu/Top Menu |  Menu |
|  Option |  Options |
|  Up |  Up |
|  Return |  Back |





| Originale | | Sostituto | | Originale | | Sostituto | |
|-----------|----------------|-----------|---------------|-----------|--|-----------|--|
| | Down | | Down | | | | |
| | Right/II> | | Right | | | | |
| | <II/Left | | Left | | | | |
| | OK | | Ok | | | | |
| | Red | | Red | | | | |
| | Green | | Green | | | | |
| | Yellow | | Yellow | | | | |
| | Blue | | Blue | | | | |
| | Sound/CH | | Subt | | | | |
| | Surround/Sleep | | Sleep | | | | |
| | Display | | Info | | | | |
| | Power Tv | | Shift + Power | | | | |
| | Av/Input Tv | | Shift + AV | | | | |
| | Vol+ Tv | | Ch + | | | | |
| | Vol- Tv | | Ch - | | | | |
| | | | | | | | |
| | | | | | | | |

