








 


 

 


 




 

 

 
 



 




 

| Originale  | Sostituto   |
|--|---|
|  Power On   |  Power         |
|  Power Off  |  Shift + Power |
|  HDMI Mode  |  Format        |
|  HDMI       |  Smart         |
|  Source     |  AV            |
|  Open/Close |  Eject         |
|  1          |  1             |
|  2          |  2             |
|  3          |  3             |
|  4          |  4             |
|  5          |  5             |
|  6        |  6           |
|  7        |  7           |
|  8        |  8           |
|  9        |  9           |
|  0        |  0           |
|  +10      |  Guide       |

| Originale   | Sostituto   |
|---|---|
|  Prog/Direct |  Sleep         |
|  Random      |  Media         |
|  Clear       |  Exit          |
|  Call        |  Pre Ch        |
|  SRCH        |  TV/R          |
|  Dimmer      |  3D            |
|  Mode        |  Shift + Smart |
|  Repeat      |  Text          |
|  A-B         |  Shift + Text  |
|  Top Menu    |  Menu          |
|  Menu/Pop Up |  D. Menu       |
|  Setup     |  Options     |
|  Return    |  Back        |
|  Up        |  Up          |
|  Down      |  Down        |
|  Right     |  Right       |
|  Left      |  Left        |







| Originale  | Sostituto   |
|--|---|
|  Power On   |  Power   |
|  Power Off  |  +  Shift + Power |
|  HDMI Mode  |  Format  |
|  HDMI       |  Smart   |
|  Source     |  AV  |
|  Open/Close |  Eject   |
|  1          |  1   |
|  2          |  2   |
|  3          |  3   |
|  4          |  4   |
|  5          |  5   |
|  6        |  6   |
|  7        |  7   |
|  8        |  8   |
|  9        |  9   |
|  0        |  0   |
|  +10      |  Guide   |

| Originale   | Sostituto   |
|---|---|
|  Prog/Direct |  Sleep   |
|  Random      |  Media   |
|  Clear       |  Exit  |
|  Call        |  Pre Ch  |
|  SRCH        |  TV/R  |
|  Dimmer      |  3D  |
|  Mode        |  +  Shift + Smart |
|  Repeat      |  Text  |
|  A-B         |  +  Shift + Text  |
|  Top Menu    |  Menu  |
|  Menu/Pop Up |  D. Menu   |
|  Return    |  Back  |
|  Setup     |  Options   |
|  Up        |  Up  |
|  Down      |  Down  |
|  Right     |  Right   |
|  Left      |  Left  |



