


















 
 
 

 








 





Originale	Sostituto
 Power	 Power
 Night Mode	 Rec
 Tuner Menu	 Menu
 Dynamic Bass	 List
 Sleep	 Sleep
 Sound Field-	 Ch -
 Sound Field+	 Ch +
 Muting	 Mute
 DVD Menu	 D. Menu
 Clear	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Originale	Sostituto
 8	 8
 9	 9
 10/0	 0
 >10	 Guide
 Function	 Smart
 Display	 Info
 DVD Setup	 Options
 Subtitle	 Subt
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Return	 Back
 Tv/Video	 TV/R



