 



Originale		Sostituto		Originale		Sostituto	
	Open/Close		Eject / Surround		4		4
	Power		Power		5		5
	Stereo/Mono		Shift + Audio / Lang I/II		6		6
	Name		Text / Goto		Band		TV/Radio /
	Dimmer		Shift + Mute / Dimmer		Angle		Info / Angle
	Repeat		Green / APP / Repeat		7		7
	Tv/Video		AV / Input / RDS		8		8
	Clear		Exit / Cancel / Clear		9		9
	Memory		Rec / Rec Mode		Sound Field		Sound / Title
	Time		Sleep / Timer		Subtitle		Subtitle / EQ
	Muting		Mute / Dimmer	>10 button"/>	>10		Guide / EPG / -/-
	Play Mode		Shift + Play /		10/0		0
	1		1		Enter		Fav / Marker / PC
	2		2		Display		Display / Media
	3		3		Vol+		Vol+
	Function		Smart / List		Vol-		Vol-
	Audio		Audio / Lang I/II		I<</Preset-		I<< / Preset-

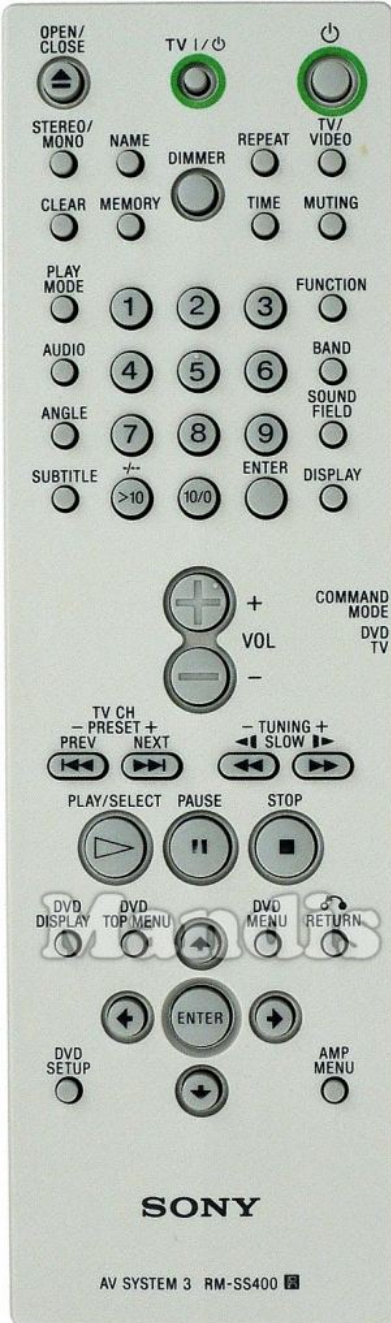



	Originale	Sostituto	Originale	Sostituto
	>> /Preset+		>> / Preset+	
	<</Tuning-/<		<< / Tune-	
	Tuning+/Slow		>> / Tune+	
	Play/Select		Play / Slow	
	Pause		Pause / Step / Freeze	
	Stop		Stop / Hold	
	DVD Display		Shift + Display / Media	
	DVD Top Menu		Shift + D.Menu / Top Menu	
	Up		Up	
	DVD Menu		D.Menu / Top	
	Return		Back / Return	
	Left		Left	
	Enter		OK	
	Right		Right	
	DVD Setup		Setup / OPT /	
	Down		Down	
	AMP Menu		Menu / Home	



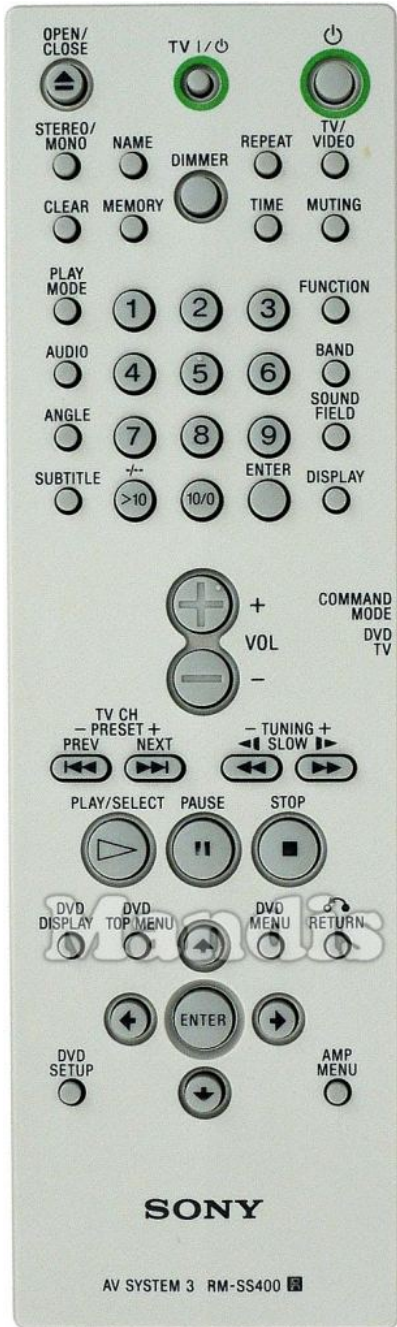 

Originale	Sostituto
Power Tv	Power
Stereo/Mono	Audio / Lang I/II
Tv/Video	AV / Input / RDS
Memory	Rec / Rec Mode
Muting	Mute / Dimmer
1	1
2	2
3	3
Function	Smart / List
4	4
5	5
6	6
Band	TV/Radio /
7	7
8	8
9	9
Sound Field	Sound / Title

Originale	Sostituto
>10	Guide / EPG / -/-
10/0	0
Display	Display / Media
Vol+	Vol+
Vol-	Vol-
Tv CH-	CH- / Page-
Tv CH+	CH+ / Page+
Enter	OK
AMP Menu	Menu / Home

