



Originale	Sostituto
 Power	 Power
 CBL/SAT	 Shift + 1
 DVD	 Shift + 2
 Tv Audio	 Dual
 Blu-ray	 Shift + 3
 AUX	 Shift + 4
 Tuner	 Shift + 5
 Bluetooth	 Shift + 6
 Game	 Shift + 7
 8K	 Shift + 8
 Phono	 Shift + 9
 USB	 Pre Ch
 Media Player	 Media
 CD	 Guide
 Heos	 Shift + 0
 Internet Radio	 TV/R
 CH/Page+	 Ch +

Originale	Sostituto
 CH/Page-	 Ch -
 Sleep	 Sleep
 Eco	 3D
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Info	 Info
 Option	 Options
 Back	 Back
 Setup	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Home	 Smart
 Stop	 Stop





Originale		Sostituto		Originale		Sostituto	
	Pause		Pause		4		4
	Play		Play		5		5
	I<</Tune-		I<<		6		6
	>>I/Tune+		>>I		7		7
	<<		<<		8		8
	>>		>>		9		9
	Smart Select 1		D. Menu		0		0
	Smart Select 2		Text				
	Smart Select 3		Eject				
	Smart Select 4		AV				
	Green/Movie		Green				
	Red/Music		Red				
	Blue/Game		Blue				
	Yellow/Pure		Yellow				
	1		1				
	2		2				
	3		3				





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Stop		Stop
	1		1		Pause		Pause
	2		2		Play		Play
	3		3		>>		>>
	4		4		<<		<<
	5		5		>> Tune+		>>
	6		6		<<Tune-		<<
	7		7		Smart Select 1		D. Menu
	8		8		Smart Select 2		Text
	9		9		Smart Select 3		Eject
	0		0		Smart Select 4		AV
	Up		Up		CH/Page+		Ch +
	Enter		Ok		CH/Page-		Ch -
	Down		Down		Sleep		Sleep
	Right		Right		Mute		Mute
	Left		Left		Back		Back
	Home		Smart		Vol+		Vol +

 



 





 

 










 
 












Originale	Sostituto	Originale	Sostituto
	Vol -		Vol -
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Blu-ray		Shift + 3
	AUX		Shift + 4
	Tuner		Shift + 5
	Bluetooth		Shift + 6
	Game		Shift + 7
	8K		Shift + 8
	Phono		Shift + 9
	Media Player		Media
	Internet Radio		TV/R
	CD		Guide
	USB		Pre Ch
	.: .:		Shift + 0
	Tv Audio		Dual





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Smart Select 2	 Text
 1	 1	 Smart Select 3	 Eject
 2	 2	 Smart Select 4	 AV
 3	 3	 Back	 Back
 4	 4	 CH/Page+	 Ch +
 5	 5	 CH/Page-	 Ch -
 6	 6	 Mute	 Mute
 7	 7	 Sleep	 Sleep
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 CBL/SAT	 Shift + 1
 Up	 Up	 DVD	 Shift + 2
 Enter	 Ok	 Blu-ray	 Shift + 3
 Down	 Down	 AUX	 Shift + 4
 Right	 Right	 Tuner	 Shift + 5
 Left	 Left	 Bluetooth	 Shift + 6
 Smart Select 1	 D. Menu	 Game	 Shift + 7

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Smart Select 2	 Text
 1	 1	 Smart Select 3	 Eject
 2	 2	 Smart Select 4	 AV
 3	 3	 Back	 Back
 4	 4	 CH/Page+	 Ch +
 5	 5	 CH/Page-	 Ch -
 6	 6	 Mute	 Mute
 7	 7	 Sleep	 Sleep
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 CBL/SAT	 Shift + 1
 Up	 Up	 DVD	 Shift + 2
 Enter	 Ok	 Blu-ray	 Shift + 3
 Down	 Down	 AUX	 Shift + 4
 Right	 Right	 Tuner	 Shift + 5
 Left	 Left	 Bluetooth	 Shift + 6
 Smart Select 1	 D. Menu	 Game	 Shift + 7





Originale	Sostituto
 BK 8K	 SHIFT + 8 Shift + 8
 PHONO Phono	 SHIFT + 9 Shift + 9
 USB USB	 FAV PRE-CH Pre Ch
 MEDIA PLAYER Media Player	 APP MEDIA Media
 CD CD	 GUIDE Guide
 INTERNET RADIO Internet Radio	 SEARCH TV/R TV/R
 .: .:	 SHIFT + 0 Shift + 0
 HOME Home	 HOME SMART Smart
 Stop	 Stop
 Pause	 Pause
 Play	 PLAY MODE Play
 >>	 >>
 <<	 <<
 >>I/Tune+	 >>I >>I
 I<</Tune-	 I<< I<<
 TV Audio	 SOUND DUAL Dual

Originale	Sostituto

