






 

 









 



 

 





 






Originale	Sostituto
 Power	 Power
 Source	 AV
 HDMI	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 PRE-CH	 Pre Ch
 Mute	 Mute
 CH List	 List

Originale	Sostituto
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Home	 Smart
 Menu	 Menu
 Guide	 Guide
 Tools	 Options
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Red	 Red
 Green	 Green





Originale		Sostituto		Originale		Sostituto	
	Yellow		Yellow				
	Blue		Blue				
	Dual I-II		Dual				
	Content		D. Menu				
	3D		3D				
	Alarm		TV/R				
	P.Size		Format				
	Subt.		Subt				
	Enter		Ok				
	<</ <<		<<				
	Pause		Pause				
	>>/>>		>>				
	Play		Play				
	Rec		Rec				
	Stop		Stop				

