



 






 
 



 
 
 





 
 
Originale	Sostituto
 Power	 Power
 Standby	 Shift + Power
 USB	 1
 CD	 2
 MD/CD-R	 3
 TUNER	 4
 DVD	 5
 DTV/CBL	 6
 DVR	 7
 V-AUX/DOCK	 8
 A	 Red
 B	 Green
 C	 Yellow
 D	 Blue
 Mute	 Mute
 Volume+	 Vol +
 Volume-	 Vol -

Originale	Sostituto
 Scene 1	 Shift + Red
 Scene 2	 Shift + Green
 Scene 3	 Shift + Yellow
 Scene 4	 Shift + Blue
 Level	 D. Menu
 Menu	 Menu
 Return	 Back
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Prog-	 Ch -
 Prog+	 Ch +
 Enhancer	 Shift + 1
 Sur. Decode	 Shift + 2









 



 

 

 





 





 





 
 
Originale	Sostituto
 Power AV	 Power
 Mute	 Mute
 Volume+	 Vol +
 Volume-	 Vol -
 Band	 Smart
 Menu	 Menu
 Return	 Back
 Display	 Shift + Info
 Preset+	 Up
 Preset-	 Down
 A/B/C/D/E+	 Right
 A/B/C/D/E-	 Left
 Enter	 Ok
 Info	 Info
 EON	 Media
 PTY SEEK Mode	 Ch -
 PTY SEEK Start	 Ch +

Originale	Sostituto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ENT	 Pre Ch






 
 
 




Originale	Sostituto
 Power AV	 Power
 Mute	 Mute
 Volume+	 Vol +
 Volume-	 Vol -
 Title	 Smart
 Menu	 Menu
 Return	 Back
 Display	 Info
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Rec	 Rec
 Stop	 Stop
 Pause	 Pause
 Play	 Play

Originale	Sostituto
 <<	 <<
 >>	 >>
 1/2 <<	 1/2 <<
 >> 1/2	 >> 1/2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 ENT	 Pre Ch





Originale	Sostituto
 Power AV	 Power
 Mute	 Mute
 Volume+	 Vol +
 Volume-	 Vol -
 Title	 Smart
 Menu	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Return	 Back
 Display	 Info
 Rec	 Rec
 Stop	 Stop
 Pause	 Pause
 Play	 Play

Originale	Sostituto
 <<	 <<
 >>	 >>
 <<	 <<
 >>	 >>
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 ENT	 Pre Ch

