

 

 

 

 





 

 

 

 





 











Originale	Sostituto
 Standby/On	 Power
 Power AUX	 Shift + Power
 1 AUX	 Shift + 1
 2 AUX	 Shift + 2
 3 AUX	 Shift + 3
 4 AUX	 Shift + 4
 5 AUX	 Shift + 5
 6 AUX	 Shift + 6
 7 AUX	 Shift + 7
 8 AUX	 Shift + 8
 9 AUX	 Shift + 9
 0 AUX	 Shift + 0
 Surround	 Eject / Surround
 CH Level	 Info / Angle
 Up	 Up
 Menu	 Menu / Home
 Left	 Left

Originale	Sostituto
 Select	 OK
 Right	 Right
 Test	 Text / Goto
 Down	 Down
 Return	 Back / Return
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 TV	 1
 DVD	 2
 Sleep	 Sleep / Timer
 AUX	 7
 VCR	 4
 Stereo	 Red / Netflix / Search
 3 Beam	 Green / APP / Repeat
 5 Beam	 Yellow / YouTube / Repeat
 ST+3 Beam	 Blue / Prime Video / Random



