 

 
 
 

 
 
 
 
 
 
 


 
 



 



 



 



 



 
 


 
 




 


 
 





















Originale		Sostituto		Originale		Sostituto	
	On/Standby		Power		Sleep		Sleep
	Open/Close		Eject		Bass/Treble		Options
	1		1		X-Bass		Dual
	2		2		Random		Subt
	3		3		<</<</Tuning		<<
	4		4		>>/>>/Tuning		>>
	5		5		Folder		Text
	6		6		Demo/Dimmer		Info
	7		7		Preset Up		Up
	8		8		Preset Down		Down
	9		9		Enter		Ok
	0		0		Vol+		Vol +
	10+		Guide		Vol+		Right
	Back/Repeat		Back		Vol-		Vol -
	Memory		Smart		Vol-		Left
	Clear		Exit		Mute		Mute
	Clock/Timer		AV		CD		Yellow





Originale		Sostituto	
	USB		Green
	Tuner		Blue
	Input/Audio/Line		Red
	iPod		3D
	(Tv Out)/Display		TV/R
	Menu		Menu
	Play/Pause iPod		Play
	Display CD/USB		Ch +
	Stop CD/USB		Stop
	Play/Pause		Pause
	ASPM RDS		D. Menu
	PTY RDS		Format
	Display RDS		Ch -

Originale		Sostituto	

