

























 
 





 


 





 



 

 

 



 

 

 













 





 

Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Home	 Shift + Menu /
 0	 0
 YouTube	 Shift + Yellow / YouTube /
 Vol+	 Vol+
 TV	 TV/Radio /
 CH+	 CH+ / Page+

Originale	Sostituto
 Vol-	 Vol-
 Source	 AV / Input / RDS
 CH-	 CH- / Page-
 USB	 Shift + 8
 Option	 Setup / OPT /
 Info	 Info / Angle
 FAV	 Fav / Marker / PC
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/--
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix / Search





Originale		Sostituto	
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Sleep		Sleep / Timer
	Zoom-		Shift + Zoom / Zoom /
	Zoom+		Zoom / Size
	List		Smart / List
	Text		Text / Goto
	Sub		Subtitle / EQ
	Recall		Shift + Back / Return
	Eco		Display / Media
	<<		<< / Tune-
	>>		>> / Tune+
	I<		I<< / Preset-
	>I		>>I / Preset+
	Rec		Rec / Rec Mode

Originale		Sostituto	
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Audio		Audio / Lang I/II

