


 


 




 




 


 

 

 





 
 


 


Originale	Sostituto	Originale	Sostituto
PWR On/Off	 Power	Menu Down	 Down
Mute	 Mute	Back	 Back
Opt?	 Options	Volume+	 Vol +
Info	 Info	CH/Page+	 Ch +
App	 Media	Volume-	 Vol -
Subt.List	 Subt	Audio	 Dual
Sleep Timer	 Sleep	CH/Page-	 Ch -
TV	 TV/R	1. ?	 1
Video	 D. Menu	2abc	 2
Text	 Text	3def	 3
Zoom	 Eject	4ghi	 4
TV/SAT	 AV	5jkl	 5
Menu	 Menu	6mno	 6
Menu Up	 Up	7pqrm	 7
Menu Left	 Left	8tuv	 8
OK Enter	 Ok	9wxyz	 9
Menu Right	 Right	Guide Pilote	 Guide



Originale	Sostituto	Originale	Sostituto
0/10	 0		
FAV Pref.	 Pre Ch		
Red	 Red		
+	 3D		
Pers.	 Format		
Sys/Serv	 List		
Browse	 Smart		
East	 >>I		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
Freeze	 Stop		
Lang./Rewind	 <<		
H/V Play	 Play		
LNB F.Forward	 >>		
Dec/Pause	 Pause		

