




 

 
 












 







 






Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG	 Guide / EPG / -/-
 0	 0
 List	 Smart / List
 Mode	 D.Menu / Top
 i	 Info / Angle
 TV/R Live	 TV/Radio /

Originale	Sostituto
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Recall	 Back / Return
 Menu	 Menu / Home
 CH+	 CH+ / Page+
 Text	 Text / Goto
 Option	 Setup / OPT /
 Vol+	 Vol+
 CH-	 CH- / Page-
 F1	 Shift + 1
 F2	 Shift + 2
 Vol-	 Vol-
 Rec	 Rec / Rec Mode



Program



Originale	Sostituto
 Play	 Play / Slow
 Archive	 Display / Media
 <<	 << / Tune-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Originale	Sostituto

