













 





 

 









 





 

 



 




 

 




















Originale	Sostituto
 RDS ASPM	 D.Menu / Top
 Direct	 Info / Angle
 RDS PTY	 Text / Goto
 On Screen	 Smart / List
 RDS Display	 Setup / OPT /
 Clear / Display	 Display / Media
 Clear / Display	 Exit / Cancel / Clear
 On / Stand By	 Power
 1	 1
 2	 2
 3	 3
 Clock / Timer	 Sleep / Timer
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 0	 0
 +10	 Guide / EPG / -/-
 Memory /	 Mute / Dimmer
 Zoom	 Zoom / Size
 Subtitle	 Subtitle / EQ
 Menu	 Menu / Home
 Up / Tuning+	 Shift + >> /
 Up / Tuning+	 Up
 Return	 Back / Return
 Left	 Left
 Enter	 OK
 Right	 Right
 >>  / >> /	 >> / Tune+
 I<< / << / Preset-	 I<< / Preset-
 I<< / << / Preset-	 << / Tune-
 Down / Tuning-	 Shift + << / Tune-



