 



 

 



 


 
 
 
 


 

 




 
 
 




 
 


 



 


 


 



 


 

 

 






Originale		Sostituto		Originale		Sostituto	
	Power		Power		TV/Radio		TV/R
	Mute		Mute		Recall		Back
	Red/Repeat		Red		Menu		Menu
	Green/Prog		Green		Text		Text
	Yellow/Slow		Yellow		Exit		Exit
	Blue/Angle		Blue		Guide		Guide
	Play		Play		Source		AV
	Pause		Pause		Up		Up
	Stop		Stop		Down		Down
	<<		<<		Right		Right
	>>		>>		Left		Left
	Goto/Fav		Pre Ch		Ok/Ch List		Ok
	Eject		Eject		Vol+		Vol +
	I<<		I<<		Vol-		Vol -
	>>I		>>I		Info		Info
	Setup		Options		Zoom		Shift + Eject
	Vcr		Format		Ch+		Ch +





Originale	Sostituto
CH -	CH -
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
AUDIO	SOUND DUAL
SUBTITLE	AD SUBT

Originale	Sostituto

