



| Originale | Sostituto |
|----------------|---------------------------|
| Power Receiver | Power |
| BD | Yellow / YouTube / Repeat |
| DVD | 2 |
| DVR / BDR | AV / Input / RDS |
| HDMI | 0 |
| TV/SAT | TV/Radio / |
| CD | 3 |
| HMG | Shift + AV / Input / RDS |
| ADPT | Eject / Surround |
| iPod USB | Shift + 8 |
| Tuner | 6 |
| Video | 4 |
| Input Select | Shift + Left |
| Input Select ~ | Shift + Right |
| Master Volume | Vol+ |
| Master Volume | Vol- |
| Mute | Mute / Dimmer |

| Originale | Sostituto |
|-----------|-----------------------|
| Top Menu | D.Menu / Top |
| Band | Subtitle / EQ |
| Audio | Audio / Lang I/II |
| Tune+ | Shift + >> / |
| Up | Up |
| Tools | Setup / OPT / |
| T.Edit | Text / Goto |
| Video | Picture / Format |
| Left | Left |
| Preset - | Shift + I<< / Preset- |
| Enter | OK |
| Preset + | Shift + >>I / Preset+ |
| Right | Right |
| iPod CTRL | Smart / List |
| Home Menu | Menu / Home |
| Tune- | Shift + << / |
| Down | Down |





| Originale | | Sostituto | | Originale | | Sostituto | |
|-----------|-------------|-----------|-----------------------------|-----------|------------|-----------|-----------------------------|
| | Return | | Back / Return | | 3 Tuner | | Shift + 3 |
| | Repeat | | Green / APP / Repeat | | Audio DVD | | Shift + Audio / Lang I/II |
| | Random | | Blue / Prime Video / Random | | 4 Tuner | | Shift + 4 |
| | << | | << / Tune- | | Signal Sel | | Shift + Setup / OPT / Tools |
| | Phase CTRL | | Red / Netflix / Search | | MCACC | | Shift + Blue / Prime |
| | Play | | Play / Slow | | 5 Tuner | | 5 |
| | >> | | >> / Tune+ | | 6 Tuner | | Shift + 6 |
| | Status | | Exit / Cancel / Clear | | Sleep | | Sleep / Timer |
| | I<< | | I<< / Preset- | | Disp | | Display / Media |
| | Pause | | Pause / Step / Freeze | | 7 Tuner | | 7 |
| | MPX | | Zoom / Size | | CH Level | | Shift + CH+ / |
| | PQLS | | Shift + Menu / | | 8 Tuner | | 8 |
| | Stop | | Stop / Hold | | A.ATT. | | Shift + Yellow / YouTube / |
| | >>I | | >>I / Preset+ | | 9 Tuner | | 9 |
| | 1 Tuner | | 1 | | Dimmer | | Shift + Mute / Dimmer |
| | S.Retriever | | Shift + Text / | | CH + | | CH+ / Page+ |
| | 2 Tuner | | Shift + 2 | | D.Access | | Shift + D.Menu / Top Menu |





| Originale | Sostituto |
|--------------|-----------------------|
| Power Source | Power |
| DVD | Shift + 2 |
| Top Menu | D.Menu / Top |
| Up | Up |
| Left | Left |
| Enter | Shift + OK |
| Enter | OK |
| Right | Right |
| Down | Down |
| Return | Back / Return |
| Menu | Menu / Home |
| << | << / Tune- |
| Play | Play / Slow |
| >> | >> / Tune+ |
| I<< | I<< / Preset- |
| Pause | Pause / Step / Freeze |
| Stop | Stop / Hold |

| Originale | Sostituto |
|-----------|-------------------|
| >>I | >>I / Preset+ |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| Audio | Audio / Lang I/II |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |





| Originale | Sostituto |
|---------------|------------------------|
| Power Source | Power |
| Tuner | + Shift + 6 |
| Master Volume | Vol+ |
| Master Volume | Vol- |
| Mute | Mute / Dimmer |
| Band | Subtitle / EQ |
| Tune+ | >> / Tune+ |
| T.Edit | Text / Goto |
| Preset- | I<< / Preset- |
| Enter | OK |
| Preset+ | >>I / Preset+ |
| Search | Red / Netflix / Search |
| Tune- | << / Tune- |
| Menu | Menu / Home |
| MPX | Zoom / Size |
| 1 | 1 |
| 2 | 2 |

| Originale | Sostituto |
|-----------|----------------------------|
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| Disp | Display / Media |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| D.Access | D.Menu / Top |
| 0 | 0 |
| Class | + Shift + Display / Media |

