



Originale		Sostituto		Originale		Sostituto	
	Power Receiver		Power		3 Tuner		Shift + 3
	DVD		2		HDMI Out		AV / Input / RDS
	BD		1		4 Tuner		Shift + 4
	DVR		5		Signal Sel		Shift + Setup / OPT / Tools
	HDMI		0		MCACC		Fav / Marker / PC
	TV		TV/Radio /		5 Tuner		Shift + 5
	CD		3		6 Tuner		Shift + 6
	CD-R		9		Sleep		Sleep / Timer
	Home Media		Shift + Menu /		7 Tuner		Shift + 7
	iPod / USB		8		SBch		Eject / Surround
	Tuner		6		8 Tuner		Shift + 8
	Video 1		4		A.ATT.		Yellow / YouTube / Repeat
	Video 2		7		9 Tuner		Shift + 9
	↶ Input Select		Shift + Left		Dimmer		Shift + Mute / Dimmer
	1 Tuner		Shift + 1		D.Access		Shift + D.Menu / Top Menu
	Input Select ↷		Shift + Right		CH Level		Shift + CH+ /
	2 Tuner		Shift + 2		0 Tuner		Shift + 0





 


 


 






Originale	Sostituto
Class	Shift + Display / Media
Enter (Class)	Shift + OK
Master Volume	Vol+
Master Volume	Vol-
Mute	Mute / Dimmer
Top Menu	D.Menu / Top
Band	Subtitle / EQ
Audio	Audio / Lang I/II
Tune+	Shift + >> /
Up	Up
Tools	Setup / OPT /
T.Edit	Text / Goto
Video	Picture / Format
Left	Left
Preset -	Shift + << / Preset-
Enter	OK
Preset +	Shift + >> / Preset+

Originale	Sostituto
Right	Right
iPod CTRL	Smart / List
Home Menu	Menu / Home
Tune-	Shift + << /
Down	Down
Return	Back / Return
Auto / Alc / Direct	Info / Angle
Stereo	Sound / Title
Repeat	Green / APP / Repeat
Standard	Shift + Smart / List
Random	Blue / Prime Video / Random
Adv. Surr.	Guide / EPG / -/-
<<	<< / Tune-
Phase CTRL	Red / Netflix / Search
Play	Play / Slow
>>	>> / Tune+
Status	Exit / Cancel / Clear







Originale	Sostituto	Originale	Sostituto
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	MPX		Zoom / Size
	PQLS		Shift + Info / Angle
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Audio DVD		Shift + Audio / Lang I/II
	Disp		Display / Media
	CH -		CH- / Page-
	CH +		CH+ / Page+

Originale	Sostituto












Originale	Sostituto
Power Source	Power
DVD	+  Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Top Menu	D.Menu / Top
Up	Up
Left	Left
Enter	+  Shift + OK
Enter	OK















 

 

 
 
 
 
 

 





Originale	Sostituto
Right	Right
Down	Down
Return	Back / Return
Menu	Menu / Home
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>I	>>I / Preset+
Audio	Audio / Lang I/II







Originale	Sostituto
 Power Source	 Power
 Tuner	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 D.Access	 D.Menu / Top
 0	 0
 Class	 CH- / Page-
 Master Volume	 Vol+
 Master Volume	 Vol-
 Mute	 Mute / Dimmer

Originale	Sostituto
 Band	 Smart / List
 Tune+	 >> / Tune+
 Tune+	 Up
 T.Edit	 Text / Goto
 Preset-	 Left
 Preset-	 I<< / Preset-
 Enter	 OK
 Preset+	 >>I / Preset+
 Preset+	 Right
 Search	 Red / Netflix / Search
 Tune-	 << / Tune-
 Tune-	 Down
 Menu	 Menu / Home
 MPX	 CH+ / Page+
 Disp	 Display / Media

