

 






 


 

 




 




 







 

 



Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Chan.Up	 Ch +
Mute	 Mute	Volume-	 Vol -
Update	 Play	Chan.Down	 Ch -
Txt Stop	 Stop	1	 1
Info	 +  Shift + Info	2	 2
Text	 Text	3	 3
Txt Expand	 Eject	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
Display	 Info	7	 7
Menu Left	 Left	8	 8
OK Enter	 Ok	9	 9
Menu Right	 Right	Guide -/-- 1.	 Guide
Menu Off	 Exit	0/10	 0
Menu Down	 Down	Red	 Red
Back	 Back	Green	 Green
Volume+	 Vol +	Yellow	 Yellow



Originale		Sostituto		Originale		Sostituto	
Blue		Blue					

