













 






Originale	Sostituto
Power	Power
Tv/Radio	TV/Radio /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Subtitle	Subtitle / EQ
Text	Text / Goto
Hold	Shift + Stop /
TVG	Guide / EPG / -/--
Audio	Audio / Lang I/II
Play	Play / Slow
Pause	Pause / Step / Freeze
Size	Zoom / Size
<<	<< / Tune-
Subpage	Eject / Surround
>>	>> / Tune+

Originale	Sostituto
Rec	Rec / Rec Mode
Stop	Stop / Hold
I<<	I<< / Preset-
FAV	Fav / Marker / PC
>>I/Index	>>I / Preset+
Menu	Menu / Home
Up	Up
Source	AV / Input / RDS
Left	Left
OK	OK
Right	Right
Down	Down
Exit	Exit / Cancel / Clear
Aspect	Picture / Format
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+





Originale	Sostituto	Originale	Sostituto
 Vol-	 Vol-		
 Display	 Display / Media		
 CH-	 CH- / Page-		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 -/--	 Shift + Guide / EPG / -/--		
 0	 0		
 Recall	 Back / Return		

Originale	Sostituto	Originale	Sostituto

