





























 















 

























Originale	Sostituto
	On
	Mute
	T.Tone
	Audio
	EQ
	BD
	A/D
	Sleep
	Top
	Setup
	Auto
	LIP Sync
	Menu
	Up
	Info
	Left
	Enter
	Power
	Mute / Dimmer
	Sound / Title
	Audio / Lang I/II
	Subtitle / EQ
	Picture / Format
	Zoom / Size
	Sleep / Timer
	D.Menu / Top
	Setup / OPT /
	Text / Goto
	AV / Input / RDS
	Menu / Home
	Up
	Info / Angle
	Left
	OK

Originale	Sostituto
	Right
	Exit
	Down
	Volume+
	GAME
	CH+
	Volume-
	Display
	CH-
	AUX1
	DVD
	CD
	VCR
	TUNE
	Standby
	Dimmer
	Surr Mode
	Right
	Exit / Cancel / Clear
	Down
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	1
	2
	3
	4
	6
	Shift + Power
	Shift + Mute / Dimmer
	Shift + Sound / Title






























Originale	Sostituto	Originale	Sostituto
	Power		Power
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Volume+		Vol+
	Display		Display / Media
	Audio		Audio / Lang I/II
	Volume-		Vol-
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Memo		Smart / List
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	CH-		CH- / Page-
	CH+		CH+ / Page+
	1		1
	2		2
	3		3
	Repeat		Green / APP / Repeat
	4		4
	5		5
	6		6
	Random		Blue / Prime Video / Random
	7		7
	8		8





Originale	Sostituto	Originale	Sostituto
Power		Power	
Mute		Mute / Dimmer	
Tune-		<< / Tune-	
Tune+		>> / Tune+	
Preset-		<< / Preset-	
Preset+		>> / Preset+	
Band		Sound / Title	
PTY		Picture / Format	
T.Mode		D.Menu / Top	
Menu		Menu / Home	
Info		Info / Angle	
Enter		OK	
Volume+		Vol+	
Memo		Smart / List	
Volume-		Vol-	
Display		Display / Media	
1		1	

Originale	Sostituto	Originale	Sostituto
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	

