

 
 




 





 














 


 


 




Originale	Sostituto
 Power	 Power
 C	 Pre Ch
 Multi Window	 Smart
 Aspect	 Format
 SRS	 Dual
 SD	 Media
 Mute	 Mute
 TV/AV	 AV
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit
 Red	 Red
 Green	 Green

Originale	Sostituto
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text
 F.P.	 3D
 Index	 TV/R
 Hold	 Shift + Stop
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / VCR	 0
 N	 Options





Originale	Sostituto
 i	 INFO Info
 CH+	 CH Ch +
 CH-	 CH Ch -
 Vol+	 VOL Vol +
 Vol-	 VOL Vol -
 Programme+	 SHIFT + CH Shift + Ch +
 Programme-	 SHIFT + CH Shift + Ch -
	 <<<
	 I<<<
	 >>>
	 >>>I
	 Stop
	 Pause
	 PLAY MODE Play
	 SHIFT + Power Shift + Power
	 SHIFT + MEDIA Shift + Media
	 REC MODE Rec

Originale	Sostituto
 Direct TV Rec	 SHIFT + REC MODE Shift + Rec

