




 

 





 








 




 
 
 

 





 

 
 





 
 

 

 



 
 
 

 


 
 

 






Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 Play/D.Tuning	 Play
 Pause	 Pause
 <</Tuning-	 <<
 >>/Tuning+	 >>
 I<</Preset-	 I<<
 Stop/Mem	 Stop

Originale	Sostituto
 >>I/Preset-	 >>I
 Vol+	 Vol +
 Vol-	 Vol -
 Sound Field+	 Ch +
 Sound Field-	 Ch -
 Mute	 Mute
 Sleep	 Sleep
 AMP Menu	 Menu
 Return	 Back
 Options	 Options
 Display	 Info
 Home	 Smart
 Up	 Up
 OK	 Ok
 Down	 Down
 Right	 Right
 Left	 Left










 

 



 

 


 
 

 









 

 


Originale	Sostituto
Folder+	Shift + Ch +
Folder-	Shift + Ch -
Preview(HDMI)/iPhone CTRL	Media
Repeat/Top	Text
Shuffle/Pop Up	AV
BD	Red
DVD	Green
TV	TV/R
Game	Yellow
Pure Direct	Pre Ch
Power Tv	Shift + Power
Input Tv	Shift + AV
1 TV	Shift + 1
2 TV	Shift + 2
3 TV	Shift + 3
4 TV	Shift + 4
5 TV	Shift + 5


 


 

 




Originale	Sostituto
6 TV	Shift + 6
7 TV	Shift + 7
8 TV	Shift + 8
9 TV	Shift + 9
0/10 TV	Shift + 0
Display TV	Shift + Info
Up TV	Shift + Up
OK TV	Shift + Ok
Down TV	Shift + Down
Right TV	Shift + Right
Left TV	Shift + Left
Return TV	Shift + Back
SA-CD/CD	Shift + Green
Options TV	Shift + Options
USB	Shift + Blue
Home TV	Shift + Smart
Play/D.Tuning TV	Shift + Play







Originale	Sostituto
 Power	 Power
 DVD	 Green
 BD	 Red
 SA-CD/CD	 Yellow
 Video	 Blue
 TV	 TV/R
 Repeat/Top Menu	 Text
 Shuffle/Pop Up	 AV
 1 DVD	 1
 2 DVD	 2
 3 DVD	 3
 4 DVD	 4
 5 DVD	 5
 6 DVD	 6
 7 DVD	 7
 8 DVD	 8
 9 DVD	 9

Originale	Sostituto
 0/10 DVD	 0
 Display DVD	 Info
 Up DVD	 Up
 Down DVD	 Down
 Right DVD	 Right
 Left DVD	 Left
 OK DVD	 Ok
 Return DVD	 Back
 Options DVD	 Options
 Home DVD	 Smart
 Play/D.Tuning	 Play
 <</Tuning-	 <<
 >>/Tuning+	 >>
 I<</Preset-	 I<<
 Pause DVD	 Pause
 Stop/Mem DVD	 Stop
 >>I/Preset+	 >>I



DVD










 
 



 
Originale	Sostituto
Repeat/Top Menu	+  Shift + Text
Shuffle/Pop Up Menu BD	+  Shift + AV
1 BD	+  Shift + 1
2 BD	+  Shift + 2
3 BD	+  Shift + 3
4 BD	+  Shift + 4
5 BD	+  Shift + 5
6 BD	+  Shift + 6
7 BD	+  Shift + 7
8 BD	+  Shift + 8
9 BD	+  Shift + 9
0/10 BD	+  Shift + 0
Display BD	+  Shift + Info
Return BD	+  Shift + Back
Options BD	+  Shift + Options
Up BD	+  Shift + Up
OK BD	+  Shift + Ok

Originale	Sostituto
Down BD	+  Shift + Down
Right BD	+  Shift + Right
Left BD	+  Shift + Left
Home BD	+  Shift + Smart
Play/D.Tuning BD	Format
Pause BD	3D
Stop/Mem BD	Subt
<</Tuning- BD	+  Shift + Format
>>/Tuning+ BD	+  Shift + 3D
I<</Preset- BD	Ch -
>>/Tuning+ BD	Ch +
Vol+	Vol +
Vol-	Vol -
Mute	Mute





Originale	Sostituto
 Power	 Power
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 SA-CD/CD	 Red
 BD	 Green
 Video	 Yellow
 DVD	 Blue
 Repeat/Top	 Text
 Shuffle/Pop Up	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Originale	Sostituto
 8	 8
 9	 9
 0/10	 0
 Display	 Info
 Play/D.Tuning	 Play
 <</Tuning-	 <<
 >>/Tuning+	 >>
 Pause	 Pause
 Stop/Mem	 Stop
 I<</Preset-	 I<<
 >>I/Preset+	 >>I





Originale	Sostituto
 Power	 Power
 BD	 Green
 DVD	 Blue
 Video	 Yellow
 SA-CD/CD	 Red
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 Display	 Info
 Up	 Up

Originale	Sostituto
 OK	 Ok
 Down	 Down
 Right	 Right
 Left	 Left
 Home	 Smart
 Play/D.Tuning	 Play
 <</Tuning-	 <<
 >>/Tuning+	 >>
 I<</Preset-	 I<<
 Pause	 Pause
 Stop/Mem	 Stop
 >>I/Preset+	 >>I
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -

