

 



 



 
 

 

 

 

 

 

 

 










 
 
 
 
Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 3D Sound	 Sound / Title
 Dolby PL II	 Audio / Lang I/II
 S/W Level	 Subtitle / EQ
 Eject	 Eject / Surround
 Full Screen	 Zoom / Size
 Sleep	 Sleep / Timer
 Function	 TV/Radio /
 Disc Menu	 D.Menu / Top

Originale	Sostituto
 Tools	 Setup / OPT /
 vTuner	 Text / Goto
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 Vol +	 Vol+
 Smart Hub	 Smart / List
 Tuning / CH +	 CH+ / Page+
 Vol -	 Vol-
 DSP	 Display / Media
 Tuning / CH -	 CH- / Page-







 

 

 



 

 

 





 



 

 







Originale	Sostituto
 1 / RDS Display	 1
 2	 2
 3 / TA	 3
 4 / PTY -	 4
 5 / PTY Search	 5
 6 / PTY +	 6
 7	 7
 8	 8
 9	 9
 SFE Mode	 Guide / EPG / -/--
 0	 0
 2D → 3D	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green / iPod Sync	 Green / APP / Repeat
 Yellow / Tuner Memory	 Yellow / YouTube / Repeat
 Blue / Mo/St	 Blue / Prime Video / Random
 Title Menu / PopUp Menu	 Shift + Home Menu / Home

Originale	Sostituto
 Search	 Shift + Red / Netflix /
 Repeat	 Shift + Green / APP /





Originale	Sostituto
 Power	 Power
 TV Source	 AV / Input / RDS
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

Originale	Sostituto
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down





Originale	Sostituto
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Smart / List
	Shift + Red / Netflix /
	Audio / Lang I/II

Originale	Sostituto

