
 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Tv Display	 Info
 Mute	 Mute	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Enter	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 S.M.	 Smart
 8	 8	 P.M.	 Media
 9	 9	 CH+	 Ch +
 0	 0	 CH-	 Ch -
 ·	 Shift + Guide	 EPG Page Up	 Shift + Up
 Recall	 Back	 EPG Page Down	 Shift + Down
 Menu	 Menu	 Sleep	 Sleep
 Source	 AV	 P.G.	 Format
 Exit	 Exit	 Aspect	 3D





Originale		Sostituto	
	CH List		List
	EPG		Guide
	FAV		Pre Ch
	DTV Strength		D. Menu
	TV		TV/R
	AV		Eject
	HDMI		Text
	YPbPr		Shift + Format
	CC		Subt
	MTS/SAP		Dual
	VGA		Options
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originale		Sostituto	

