

 
















Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu / Home
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold










 

Originale	Sostituto
 Pause	 Pause / Step / Freeze
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Media	 Display / Media
 Up	 Up
 Guide	 Guide / EPG / -/-
 Left	 Left
 OK/List	 OK
 OK/List	 +  Shift + Smart / List
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Last	 Back / Return
 Vol+	 Vol+
 Info	 Info / Angle







Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu / Home
 <<	 << / Tune-
 >>	 >> / Tune+
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK/List	 OK

Originale	Sostituto
 OK/List	 Smart / List
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Vol+	 Vol+
 Info	 Info / Angle
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-

