










 







 









Originale	Sostituto
 Power	 Power
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Pop Up Menu/Disc Menu	 D. Menu
 Top Menu	 Menu
 Home	 Smart
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Back	 Back
 ≡/Options	 Options
 Play	 Play
 Pause	 Pause

Originale	Sostituto
 Stop/Open/Clos	 Stop
 Stop/Open/Clos	 Eject
 >>	 >>
 <<	 <<
 >	 >>
 <	 <<
 1.@	 1
 2 ABC	 2
 DEF 3	 3
 4 GHI	 4
 5 JKL	 5
 MNO 6	 6
 7 PQRS	 7
 8 TUV	 8
 WXYZ 9	 9
 0_	 0
 Subtitle	 Subt





Originale		Sostituto		Originale		Sostituto	
AUDIO	Audio	SOUND DUAL	Dual				

