



 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 8	 8
 Sleep	 Sleep	 9	 9
 Open/Close	 Eject	 0	 0
 Mute	 Mute	 Title/Rotate	 Guide
 V.Sel	 Smart	 Menu	 Menu
 AV	 AV	 Info	 Info
 DVD	 Media	 Exit	 Exit
 Tuner	 TV/R	 I<	 I<<
 Mode	 Format	 >I	 >>I
 Tone	 Subt	 <<	 <<<
 1	 1	 >>	 >>>
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Vol+	 Vol +

Originale	Sostituto	Originale	Sostituto
 8	 8	 8	 8
 9	 9	 9	 9
 0	 0	 0	 0
 Title/Rotate	 Guide	 Title/Rotate	 Guide
 Menu	 Menu	 Menu	 Menu
 Info	 Info	 Info	 Info
 Exit	 Exit	 Exit	 Exit
 I<	 I<<	 I<	 I<<
 >I	 >>I	 >I	 >>I
 <<	 <<<	 <<	 <<<
 >>	 >>>	 >>	 >>>
 Up	 Up	 Up	 Up
 Down	 Down	 Down	 Down
 Right	 Right	 Right	 Right
 Left	 Left	 Left	 Left
 OK	 Ok	 OK	 Ok
 Vol+	 Vol +	 Vol+	 Vol +



