



 


 



 


 



























 

 





	Originale	Sostituto	Originale	Sostituto	
	Power		Power		Mute
	Audio		Dual		Vol +
	[+]		Format		Vol -
	Digital		Media		Info
	Analog		Smart		Menu
	1		1		Exit
	2		2		Back
	3		3		Ch +
	4		4		Ch -
	5		5		Options
	6		6		Guide
	7		7		
	8		8		
	9		9		
	0		0		
	[≡]		Text		
	Recall		Pre Ch		





Originale	Sostituto
 Power	 Power
 Menu	 Menu
 Top Menu	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Enter	 Pre Ch
 F1	 Smart
 F2	 Media

Originale	Sostituto
 [::=]	 Guide
 Display	 Info
 Tools/Options	 Options
 Return/Exit	 Back
 Menu/Home	 TV/R
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 I<<	 I<<
 >>I	 >>I
 Play	 Play
 Pause	 Pause





Originale	Sostituto	Originale	Sostituto
	Stop		Stop
	<<		<<
	>>		>>
	↑		Ch -
	→		Ch +



 










Originale	Sostituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Originale	Sostituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	














 



 

 







 
 




 
 




 

 



 



 



 



 

 
 











	Originale	Sostituto	Originale	Sostituto
	<<		<<	<<
	>>		>>	>>
	<<		<<	<<
	↑		Ch -	Ch -
	↓		Ch +	Ch +





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Display		Info
	Source		AV		Mute		Mute
	1		1		Vol+		Vol +
	2		2		Vol-		Vol -
	3		3		Menu/Home		Media
	4		4		Return/Exit		Back
	5		5		Up		Up
	6		6		OK		Ok
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		Play		Play
	Clear		Exit		Stop		Stop
	Enter		Pre Ch		Pause		Pause
	Theatre		Smart		>>/Tuning+		>>
	Sound Field		Dual		<</Tuning-		<<
	AMP Menu		Menu		>>I/Preset+		>>I





	Originale	Sostituto	
	I<</Preset-		I<<
	→		Ch +
	←		Ch -
	DMPort		Options
	Video		Shift + 1
	BD		Shift + 3
	DVD		Shift + 4
	SAT		Shift + 5
	TV		Shift + 6
	Tuner/Band		Shift + 8

Originale	Sostituto

