



	Originale	Sostituto		Sostituto
	Standby/On		Power	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	10		Guide	
	+10		Pre Ch	
	Display		Info	
	Cancel		Exit	
	Top Menu		Shift + Menu	
	Return		Shift + Back	

	Originale	Sostituto		Sostituto
	Set Up		Options	
	Set		D. Menu	
	Menu		Menu	
	On Screen		Red	
	Up		Up	
	Down		Down	
	Right		Right	
	Left		Left	
	Enter		Ok	
	Back		Back	
	Play DVD/CD		Play	
	FM/AM/AUX		TV/R	
	Disc Select		Blue	
	<> Tape		Yellow	
	Pause		Pause	
	Stop		Stop	
	Disc Rec Mode		Rec	





Originale	Sostituto
I<<<	I<<<
>>>	>>>
<<</Slow-	<<<
>>>/Slow+	>>>
Sleep	Sleep
Clock/Timer	AV
Dimmer	Media
A.Standby	Shift + Power
Bass/Treble	Shift + Dual
Fade Muting	Mute
Rhythm AX	Smart
Vol+	Vol +
Vol-	Vol -
Repeat	Text
FM Play Mode	Green
Repeat A-B	Shift + Text
REV Mode	Shift + Rec

Originale	Sostituto
I<<< Group/Title	Ch -
>>> Group/Title >>>	Ch +
Audio	Dual
Subtitle	Subt
Angle	Shift + TV/R
Zoom	Eject
VFP	Shift + Subt
DVD Level	List
Progressive	Format
Page+	Shift + Ch +
Page-	Shift + Ch -
3D Phonic	3D

