
































Originale	Sostituto
 Standby	 Power
 Play/Pause	 Shift + Play /
 Play/Pause	 Play / Slow
 Source	 AV / Input / RDS
 Open / Close	 Eject / Surround
 Repeat	 Green / APP / Repeat
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 Guide / EPG / -/--

Originale	Sostituto
 Memory	 Setup / OPT /
 CH+ / Page+	 CH+ / Page+
 Stop	 Stop / Hold
 USB	 Shift + 8
 CH- / Page-	 CH- / Page-
 Prev	 I<< / Preset-
 Vol+	 Vol+
 Next	 >>I / Preset+
 Vol-	 Vol-
 Mute	 Mute / Dimmer

