



Originale	Sostituto	Originale	Sostituto
Power	Power	<<	<<
Eject	Eject	Play	Play
Tv/VCR	TV/R	>>	>>
AV	AV	Pause/Still	Pause
CM Skip	Smart	Stop	Stop
1	1	LP	Format
2	2	i	Info
3	3	OK/CLK/CNT	Ok
4	4	Rec/OTR	Rec
5	5	Clear	Exit
6	6	Up	Up
7	7	Down	Down
8	8	Right	Right
9	9	Left	Left
0	0	C.Lock	Blue
ez Power Off	Media		
ez Repeat	Text		

Originale	Sostituto	Originale	Sostituto
Power	Power	<<	<<
Eject	Eject	Play	Play
Tv/VCR	TV/R	>>	>>
AV	AV	Pause/Still	Pause
CM Skip	Smart	Stop	Stop
1	1	LP	Format
2	2	i	Info
3	3	OK/CLK/CNT	Ok
4	4	Rec/OTR	Rec
5	5	Clear	Exit
6	6	Up	Up
7	7	Down	Down
8	8	Right	Right
9	9	Left	Left
0	0	C.Lock	Blue
ez Power Off	Media		
ez Repeat	Text		

