 




 

 


 









Originale	Sostituto
 Power	 Power
 Tv/AV	 AV
 Mute	 Mute
 SAT	 Smart
 FAV	 Pre Ch
 Info	 Info
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 Tv/Radio	 TV/R
 ←PR	 Back
 EPG	 Guide
 Pause	 Pause
 ↑	 Ch +
 ↓	 Ch -
 PR+/Up	 Up
 PR-/Down	 Down
 Right	 Right
 Left	 Left
 OK/List	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Exit	 Exit
 Record	 Rec
 Shift	 Options





Originale	Sostituto
 Red/Find	 Red
 Green/V-Format	 Green
 Yellow/TXT	 Yellow
 Blue/Audio	 Blue
 Fast >>	 >>I
 << Fast	 I<<
 < Slow	 <<
 Slow >	 >>
 Play	 Play
 Stop	 Stop

Originale	Sostituto

