 
 



 
 
 


 










 
 

 
 



 



 
 



 






 
 
 
Originale	Sostituto
 Power	 Power
 Standby	 Shift + Power
 Multi CH In	 Smart
 Audio Sel	 Media
 Sleep	 Sleep
 Mute	 Mute
 CD	 2
 MD/CD-R	 3
 TUNER	 4
 DVD	 5
 DTV/CBL	 6
 DVR	 7
 V-AUX	 8
 USB	 1
 Scene 1	 Red
 Scene 2	 Green
 Scene 3	 Yellow

 

 

 


 
 

 
 




 

 
 


Originale	Sostituto
 Scene 4	 Blue
 Level	 D. Menu
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Return	 Back
 Display	 Info
 Volume+	 Vol +
 Volume-	 Vol -
 Prog-	 Ch -
 Prog+	 Ch +
 Enhancer	 Shift + 1
 Straight	 Shift + 3
 Sur. Decode	 Shift + 2







 



 

 

 

 
 
 


 




 

 





 

 

 
 
 





 



 

 

 
 


 




 


 
 




Originale	Sostituto
 Power AV	 Power
 Mute	 Mute
 Band	 Smart
 Menu	 Menu
 Preset+	 Up
 Preset-	 Down
 A/B/C/D/E+	 Right
 A/B/C/D/E-	 Left
 Enter	 Ok
 Return	 Back
 Display	 Info
 Volume+	 Vol +
 Volume-	 Vol -
 Freq / Text	 Text
 EON	 Media
 PTY SEEK Mode	 Ch -
 PTY SEEK Start	 Ch +

Originale	Sostituto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ENT	 Pre Ch


 





 


 
 


 


 


 









 

 
 






 

 
 

 



 




Originale		Sostituto		Originale		Sostituto	
	Power AV		Power		<<		<<
	Mute		Mute		>>		>>
	Title		Smart		<<		<<
	Menu		Menu		>>		>>
	Up		Up		1		1
	Left		Left		2		2
	Enter		Ok		3		3
	Right		Right		4		4
	Down		Down		5		5
	Return		Back		6		6
	Display		Info		7		7
	Volume+		Vol +		8		8
	Volume-		Vol -		9		9
	Rec		Rec		0		0
	Stop		Stop		+10		Guide
	Pause		Pause		ENT		Pre Ch
	Play		Play				





Originale	Sostituto
 Power AV	 Power
 Mute	 Mute
 Title	 Smart
 Menu	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Return	 Back
 Display	 Info
 Volume+	 Vol +
 Volume-	 Vol -
 Rec	 Rec
 Stop	 Stop
 Pause	 Pause
 Play	 Play

Originale	Sostituto
 <<	 <<
 >>	 >>
 I<<	 I<<
 >>I	 >>I
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 ENT	 Pre Ch

