



Originale	Sostituto
 Power	 Power
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 CABLE	 Shift + Yellow
 SAT	 Shift + Blue
 CH Sel	 TV/R
 CH/Level Up	 Ch +
 CH/Level Down	 Ch -
 SPK SET	 Exit
 PLII PARA.	 D. Menu
 Adjust -	 Shift + Down
 Adjust +	 Shift + Up
 Mute	 Mute

Originale	Sostituto
 Vol+	 Vol +
 Vol-	 Vol -
 Auto	 Subt
 DSP -	 Shift + Left
 DSP +	 Shift + Right
 Stereo	 Dual
 Setup / OSD	 Options
 Menu / T.Tone	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Display / Sleep	 Info
 Display / Sleep	 Sleep
 Return /	 Back
 Stop / P.Scan	 Stop





Originale	Sostituto	Originale	Sostituto
 << / Tune -	 <<	 >> / Tune +	 >>
 I<< / Preset -	 I<<	 >>I / Preset +	 >>I
 7CH Dir	 ECO 3D	 1 / Tuner	 1
 2 / CD	 2	 3 / AUX	 3
 4 / Tape	 4	 5	 5
 6 / Video 1	 6	 7 / Video 2	 7
 8 / Video 3	 8	 9	 9
 0	 0	 AUX Power /	 SHIFT + 
 AUX Rec	 SHIFT + 		

Originale	Sostituto
 AUX Pause	 SHIFT +  Shift + Pause
 AUX Play	 SHIFT +  Shift + Play
 AUX Stop	 SHIFT +  Shift + Stop
 AUX <<	 SHIFT +  Shift + <<
 AUX >>	 SHIFT +  Shift + >>
 AUX >>I	 SHIFT +  Shift + >>I
 AUX I<<	 SHIFT +  Shift + I<<





Originale	Sostituto
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 CABLE	 Shift + Yellow
 SAT	 Shift + Blue
 TV Power	 Power
 TV CH +	 Ch +
 TV CH -	 Ch -
 TV CH Sel.	 Media
 TV Mute	 Mute
 TV Volume +	 Vol +
 TV Volume -	 Vol -
 TV 1	 1
 TV 2	 2

Originale	Sostituto
 TV 3	 3
 TV 4	 4
 TV 5	 5
 TV 6	 6
 TV 7	 7
 TV 8	 8
 TV 9	 9
 TV 0	 0
 CABLE Power	 Shift + Power
 CABLE CH/Level +	 Shift + Ch +
 CABLE CH/Level -	 Shift + Ch -
 CABLE CH Sel.	 Shift + Smart
 CABLE Mute	 Shift + Mute
 CABLE Volume +	 Shift + Vol +
 CABLE Volume -	 Shift + Vol -
 CABLE 1	 Shift + 1
 CABLE 2	 Shift + 2





Originale	Sostituto	Originale	Sostituto
CABLE 3	Shift + 3		
CABLE 4	Shift + 4		
CABLE 5	Shift + 5		
CABLE 6	Shift + 6		
CABLE 7	Shift + 7		
CABLE 8	Shift + 8		
CABLE 9	Shift + 9		
CABLE 0	Shift + 0		

Originale	Sostituto





Originale	Sostituto
	 Red
	 Green
	 Yellow
	 Blue
	 Shift + Red
	 Shift + Green
	 Shift + Blue
	 Shift + Yellow
	 Power
	 Menu
	 Dual
	 Subt
	 3D
	 Format
	 Up
	 Left
	 Ok

Originale	Sostituto
	 Right
	 Down
	 Info
	 Pause
	 Play
	 Stop
	 <<
	 >>
	 I<<
	 >>I
	 1
	 2
	 3
	 4
	 5
	 6
	 7





Originale		Sostituto		Originale		Sostituto	
	DVD 8		8		SAT 8	+	Shift + 8
	DVD 9		9		SAT 9	+	Shift + 9
	DVD 0		0		SAT 0	+	Shift + 0
	SAT Power	+	Shift + Power				
	SAT CH +	+	Shift + Ch +				
	SAT CH -	+	Shift + Ch -				
	SAT CH Sel.	+	Shift + Media				
	SAT Mute	+	Shift + Mute				
	SAT Volume +	+	Shift + Vol +				
	SAT Volume -	+	Shift + Vol -				
	SAT 1	+	Shift + 1				
	SAT 2	+	Shift + 2				
	SAT 3	+	Shift + 3				
	SAT 4	+	Shift + 4				
	SAT 5	+	Shift + 5				
	SAT 6	+	Shift + 6				
	SAT 7	+	Shift + 7				





Originale	Sostituto
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD	 Shift + Green
 CD Pause	 Pause
 CD Play	 Play
 CD Stop	 Stop
 CD I<<	 I<<
 CD >>I	 >>I
 CD 1	 1
 CD 2	 2
 CD 3	 3
 CD 4	 4

Originale	Sostituto
 CD 5	 5
 CD 6	 6
 CD 7	 7
 CD 8	 8
 CD 9	 9
 CD 0	 0
 VCR Power	 Shift + Power
 VCR CH Sel.	 Shift + Media
 VCR Rec	 Shift + Rec
 VCR Play	 Shift + Play
 VCR Mute	 Shift + Mute
 VCR >>	 Shift + >>
 VCR <<	 Shift + <<
 VCR Volume -	 Shift + Vol -
 VCR Volume +	 Shift + Vol +
 VCR CH+	 Shift + Ch +
 VCR CH-	 Shift + Ch -





Originale	Sostituto
VCR Pause	+  Shift + Pause
VCR Stop	+  Shift + Stop
VCR 1	+  Shift + 1
VCR 2	+  Shift + 2
VCR 3	+  Shift + 3
VCR 4	+  Shift + 4
VCR 5	+  Shift + 5
VCR 6	+  Shift + 6
VCR 7	+  Shift + 7
VCR 8	+  Shift + 8
VCR 9	+  Shift + 9
VCR 0	+  Shift + 0

Originale	Sostituto

