




 






 
 


 
 


 



 



 


 

 

 
 







 




 




 


 




 







 


 



 

 






 
 


 
 


 

 








Originale	Sostituto	Originale	Sostituto
 Power Receiver	 Power	 Tuning -	 Ch -
 Mute	 Mute	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 Enter	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Return / Repeat	 Back
 6	 6	 Info	 Info
 7	 7	 Phono	 Shift + 1
 8	 8	 Tape	 Shift + 2
 9	 9	 CD	 Shift + 3
 0	 0	 Line 1	 Shift + 4
 +10	 Guide	 Line 2	 Shift + 5
 Option	 Options	 Line 3	 Shift + 6
 Volume +	 Vol +	 Dock	 Shift + 7
 Volume -	 Vol -	 Tuner	 Shift + 8
 Tuning +	 Ch +	 TP	 Shift + 9

Originale	Sostituto	Originale	Sostituto
 Power Receiver	 Power	 Tuning -	 Ch -
 Mute	 Mute	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 Enter	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Return / Repeat	 Back
 6	 6	 Info	 Info
 7	 7	 Phono	 Shift + 1
 8	 8	 Tape	 Shift + 2
 9	 9	 CD	 Shift + 3
 0	 0	 Line 1	 Shift + 4
 +10	 Guide	 Line 2	 Shift + 5
 Option	 Options	 Line 3	 Shift + 6
 Volume +	 Vol +	 Dock	 Shift + 7
 Volume -	 Vol -	 Tuner	 Shift + 8
 Tuning +	 Ch +	 TP	 Shift + 9





Originale	Sostituto
 Power Source	 Power
 Display	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Enter	 Ok
 Play	 Play
 Pause	 Pause
 Stop	 Stop

Originale	Sostituto
 Disc Skip	 Blue
 >>	 >>
 <<	 <<
 >>	 >>
 <<	 <<
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

