 




 

 

 



 





 

 



 
 
 







 









 

 

 



 



 



 

 

 






Originale		Sostituto		Originale		Sostituto	
	Standby / On		Power		i / Status		Info
	Sleep		Sleep		Speakers		List
	Dimmer		Blue		PHASE		Shift + 3D
	ECO		3D		Signal Sel.		AV
	BD		1		Auto / Direct		TV/R
	GAME		2		Standard		Format
	DVR / BDR		3		Adv. Surr.		Subt
	DVD		4		Mute		Mute
	SAT / CBL		5		Tools Menu		Options
	HDMI		6		Up		Up
	MHL		Shift + 6		Left		Left
	iPod / USB		7		Enter		Ok
	CD		8		Right		Right
	ADPTER		9		Down		Down
	TUNER		Guide		Home Menu		Menu
	TV		0		iPod Ctrl.		D. Menu
	NETWORK		Pre Ch		Return		Back





Originale		Sostituto		Originale		Sostituto	
	Volume+		Vol +		Random		Text
	Volume-		Vol -		Disp		Shift + Info
	Pause		Pause		Audio		Dual
	BAND		Shift + Play		SB CH		Media
	Play		Play		CH Level CH Sel		Smart
	PTY		Shift + Stop		CH Level-		Ch -
	Stop		Stop		CH Level+		Ch +
	+Fav		Shift + Pre Ch		Bass-		Shift + Down
	Preset -		Shift + I<<		Bass+		Shift + Up
	I<<		I<<		Treble-		Shift + Left
	Preset+		Shift + >>I		Treble+		Shift + Right
	>>I		>>I				
	Tune-		Shift + <<<				
	<<<		<<<				
	Tune+		Shift + >>>				
	>>>		>>>				
	Repeat		Shift + Text				

