
















 





 






















 



 



























Originale		Sostituto		Originale		Sostituto	
	DVD	 + 	Shift + 2		0		0
	Tuner	 + 	Shift + 6		Cancel	 + 	Shift + Exit / Cancel / Clear
	Port	 + 	Shift + 3		I<<		I<< / Preset-
	Aux	 + 	Shift + 7		Step	 + 	Shift + Pause / Step /
	Power		Power		Pause		Pause / Step / Freeze
	Open / Close		Eject / Surround		>>I		>>I / Preset+
	TV / Video		TV/Radio /		<<		<< / Tune-
	1		1		Stop		Stop / Hold
	2		2		Play		Play / Slow
	3		3		>>		>> / Tune+
	4		4		Volume +		Vol+
	5		5		Mute		Mute / Dimmer
	6		6		Tuning + / CH +		CH+ / Page+
	7		7		Volume -		Vol-
	8		8		Tuning - / CH -		CH- / Page-
	9		9		Menu		Menu / Home
	Remain		D.Menu / Top		Return		Back / Return






 



















Originale	Sostituto
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Exit	Exit / Cancel / Clear
SD/HD / Tuner Memory	Rec / Rec Mode
Mo/St / Slow	Picture / Format
Zoom	Zoom / Size
Info	Info / Angle
Logo	Setup / OPT /
Sleep	Sleep / Timer
Dimmer	Shift + Mute / Dimmer
Repeat	Green / APP / Repeat
V-Sound/V-H/P	Sound / Title

Originale	Sostituto
P.Bass	Text / Goto





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Menu	 Menu / Home
 TV / Video	 AV / Input / RDS	 Return	 Back / Return
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Vol+	 Vol+		
 Mute	 Mute / Dimmer		
 CH+	 CH+ / Page+		
 Vol-	 Vol-		
 CH-	 CH- / Page-		

Originale	Sostituto	Originale	Sostituto
 Menu	 Menu / Home	 Return	 Back / Return
 Up	 Up	 Left	 Left
 Enter	 OK	 Right	 Right
 Down	 Down		

