



Originale	Sostituto
 Power	 Power
 TV / Radio	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 SAT	 AV
 Info	 Info
 EPG	 Guide
 Menu	 Menu
 P+	 Shift + Ch +

Originale	Sostituto
 P-	 Shift + Ch -
 Exit	 Exit
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 FAV	 Pre Ch
 Audio	 Dual
 Mute	 Mute
 Red / ←	 Red
 Red / ←	 Back
 Black / MOT	 Blue





Originale		Sostituto		Originale		Sostituto	
	Green / Lock		Green				
	Yellow / Lang		Yellow				
	Yellow / Lang		Shift +		SOUND		Dual

