

 
 





 

 













 





 

 




	Originale	Sostituto	Originale	Sostituto
	Power	 Power	 Play / Pause	 Pause
	Mute	 Mute		
	USB	 1		
	BT	 2		
	AUX	 3		
	SD	 4		
	Line In	 6		
	Vol+	 Vol +		
	Vol+	 Up		
	Vol-	 Vol -		
	Vol-	 Down		
	>>I	 >>I		
	>>I	 Right		
	I<<	 I<<		
	I<<	 Left		
	Play / Pause	 Ok		
	Play / Pause	 Play		

