


























 




 




Originale	Sostituto
 Power On	 Power
 Power Off	 Shift + Power
 Mute	 Mute
 Stereo	 Shift + Dual
 Cable/Sat	 Green
 TV	 Blue
 CD	 Yellow
 Menu	 Menu
 Harman Volume	 Smart
 Exit	 Exit
 Tone Control	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 1	 1

Originale	Sostituto
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Shift + Exit
 Direct	 Guide
 Vol+	 Vol +
 Vol-	 Vol -
 CH/Tuner Up	 Ch +
 CH/Tuner Down	 Ch -
 Speaker 1	 Options
 Speaker 2	 Dual





Originale	Sostituto
Power On	Power
Power Off	Shift + Power
Mute	Mute
Stereo	Shift + Dual
Cable/SAT	Green
TV	Blue
CD	Yellow
Menu	Menu
Harman Volume	Smart
Exit	Exit
Tone Control	Back
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
1	1

Originale	Sostituto
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Shift + Exit
Direct	Guide
Vol+ Stereo	Vol +
Vol- Stereo	Vol -
CH/Tuner Down	Ch +
CH/Tuner Up	Ch -
Speaker 1	Options
Speaker 2	Dual



