



Originale	Sostituto
 Power On	 Power
 Power Off	 Shift + Power
 Mute	 Mute
 Cable/SAT	 Shift + 1
 STB	 Shift + 2
 TV	 Shift + 3
 Disc	 Shift + 4
 MHL	 Shift + 5
 AUX	 Shift + 6
 Audio	 Shift + 7
 Game	 Shift + 8
 AVR	 Shift + 9
 USB	 Shift + Guide
 Network	 Shift + 0
 Radio	 Shift + Pre Ch
 Surr Mode	 Dual
 OSD Menu	 Menu

Originale	Sostituto
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Back/Exit	 Back
 Home	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Originale		Sostituto		Originale		Sostituto	
	Clear		Exit		>		>>
	Test		Text		Stop		Stop
	Vol+		Vol +		Play		Play
	Vol-		Vol -		Pause		Pause
	Delay		Options		PrevCH		Pre Ch
	Info/Option		Info				
	Sleep		Sleep				
	Dim		List				
	CH/Tuner Up		Ch +				
	CH/Tuner Down		Ch -				
	P-Scan / Top		D. Menu				
	Direct		TV/R				
	Mem		Rec				
	RDS/*		Subt				
	I<		I<<				
	<<		<<				
	>>		>>				

