 



 

 

 

 

 







 

 

 

 





 



 




 

 

 

 



 


 
 
 
 

 

 

 

 

 



 





 

 



 

 



 

 

 

 

 

Originale	Sostituto
 Input	 AV / Input / RDS
 Power	 Power
 →[/]<←	 Shift + OK
 [ <> ]	 Picture / Format
 O/I/II	 Shift + Audio / Lang I/II
 TV	 TV/Radio /
 List	 Smart / List
 More Info	 Shift + Info / Angle
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 AD	 Shift + AV / Input / RDS
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 [i+]	 Info / Angle
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 Quick	 Shift + Exit / Cancel / Clear
 Guide	 Guide / EPG / -/-
 ↑	 Shift + Up
 Exit	 Exit / Cancel / Clear
 ←	 Shift + Left
 ↑	 Up
 →	 Shift + Right
 ←	 Left





Originale	Sostituto
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 ↓	 Shift + Down
 Return	 Shift + Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 Media Player	 Display / Media
 Subtitle	 Subtitle / EQ
 <</[≡+]	 << / Tune-
 Play	 Play / Slow
 >>/[≡◇]	 >> / Tune+
 I<</[≡?]	 I<< / Preset-

Originale	Sostituto
 Stop	 Stop / Hold
 Pause/Step/[▽]	 Pause / Step / Freeze
 >>I/[O]/[≡x]	 >>I / Preset+
 Power Regza Link	 Shift + Power
 Audio Regza Link	 Audio / Lang I/II
 Set Up Regza Link	 Setup / OPT /
 Open/Close Regza Link	 Eject / Surround
 Root Regza Link	 Sleep / Timer
 Contens Regza	 Shift + D.Menu / Top Menu
 Top Regza Link	 D.Menu / Top
 DVD Regza Link	 Shift + 2

