
 


 

 


 



 

 
 

 


 






 





Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 Subtitle	 Subt
 Position	 Shift + Media
 Group	 Shift + Smart
 Setup	 Options
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ≥10 / -/-	 Guide

Originale	Sostituto
 Disc	 Pre Ch
 DD Pro Logic	 Smart
 CH Select	 Media
 Test	 Text
 Super SRND	 Ch -
 Top Menu / Direct Navigator	 D. Menu
 Top Menu / Direct Navigator	 List
 EQ	 TV/R
 Menu/Playlist	 Menu
 Super Surround	 Format
 Display	 Info
 Super 3D AI EQ	 3D
 AV Effect	 AV
 Return	 Back
 Up	 Up
 Left	 Left
 Enter	 Ok





Originale	Sostituto
 Right	 Right
 Down	 Down
 VCR (Ext) / VDP (Aux)	 Red
 TAPE / Deck 1/2	 Green
 DVD	 Yellow
 TUNER / BAND	 Blue
 Play Mode	 Shift + Play
 Cancel	 Exit
 Rev. Play / Pause	 Pause
 Stop	 Stop
 Play	 Play
 << Slow/Search	 <<
 Slow/Search >>	 >>
 I<< Skip	 I<<
 Skip >>I	 >>I
 Audio	 Dual
 Mix 2CH	 Eject

Originale	Sostituto
 Digital S.Woofers	 Ch +
 Muting	 Mute
 Volume-	 Vol -
 Volume+	 Vol +

