

 

 


 

 


 
 

 







 





| Originale | Sostituto |
|---|---|
|  Power |  Power |
|  Sleep |  Sleep |
|  Subtitle |  Subt |
|  Position |  Shift + Media |
|  Group |  Shift + Smart |
|  Setup |  Options |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  ≥10 / -/- |  Guide |

| Originale | Sostituto |
|---|---|
|  Disc |  Pre Ch |
|  DD Pro Logic |  Smart |
|  CH Select |  Media |
|  Test |  Text |
|  Super SRND |  Ch - |
|  Top Menu / Direct Navigator |  D. Menu |
|  Top Menu / Direct Navigator |  List |
|  EQ |  TV/R |
|  Menu/Playlist |  Menu |
|  Super Surround |  Format |
|  Display |  Info |
|  Super 3D AI EQ |  3D |
|  AV Effect |  AV |
|  Return |  Back |
|  Up |  Up |
|  Left |  Left |
|  Enter |  Ok |





| Originale | Sostituto |
|---|--|
|  Right |  Right |
|  Down |  Down |
|  VCR (Ext) / VDP (Aux) |  Red |
|  TAPE / Deck 1/2 |  Green |
|  DVD |  Yellow |
|  TUNER / BAND |  Blue |
|  Play Mode |  Shift + Play |
|  Cancel |  Exit |
|  Rev. Play / Pause |  Pause |
|  Stop |  Stop |
|  Play |  Play |
|  << Slow/Search |  << |
|  Slow/Search >> |  >> |
|  I<< Skip |  I<< |
|  Skip >>I |  >>I |
|  Audio |  Dual |
|  Mix 2CH |  Eject |

| Originale | Sostituto |
|---|---|
|  Digital S.Woofers |  Ch + |
|  Muting |  Mute |
|  Volume- |  Vol - |
|  Volume+ |  Vol + |

