



 

 
 

 


 
 

 

 



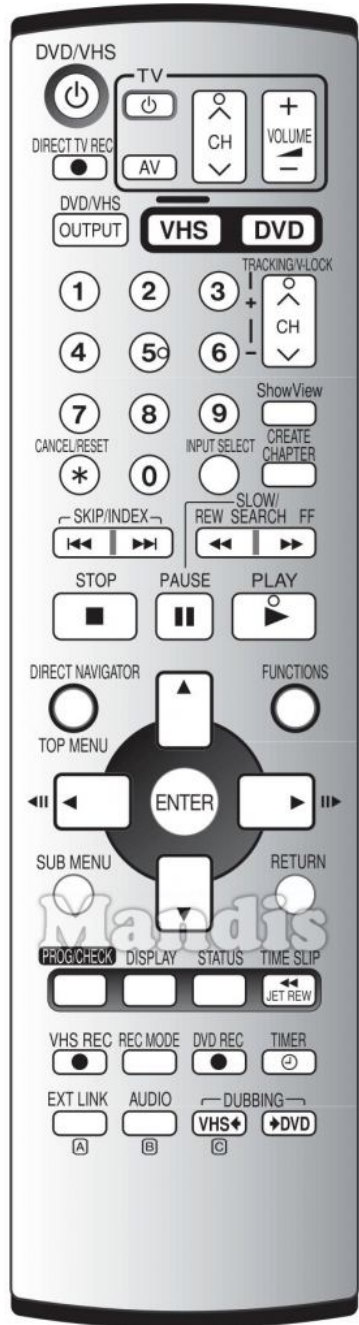 


Originale	Sostituto
 VHS/DVD Power	 Power
 Direct TV Rec	 Subt
 VHS/DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Cancel / Reset	 Exit
 Input Select	 Guide
 CH+ / Tracking/V-Lock+	 Ch +
 CH- / Tracking/V-Lock-	 Ch -

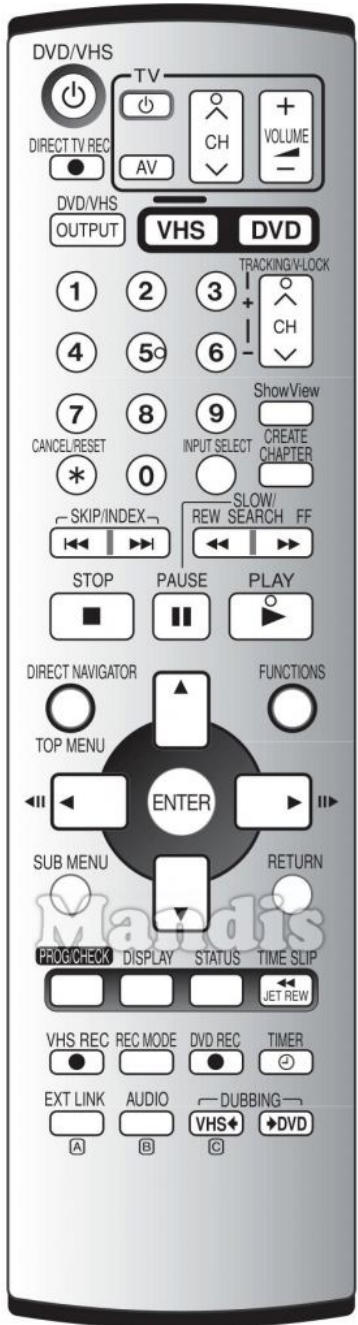 
Originale	Sostituto
 Create Chapter	 TV/R
 I<< Skip	 I<<
 Skip >>I	 >>I
 REW / << Slow/Search	 <<
 FF / Slow/Search	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Direct Navigator / Top Menu	 D. Menu
 Functions	 List
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Sub Menu	 Menu
 Return	 Back





Originale	Sostituto	Originale	Sostituto
Prog / Check	Sleep		
Display	Info		
Status	Media		
Time Slip	Vol +		
Timer	AV		
Ext Link	3D		
Audio / B	Dual		
Dubbing	Blue		

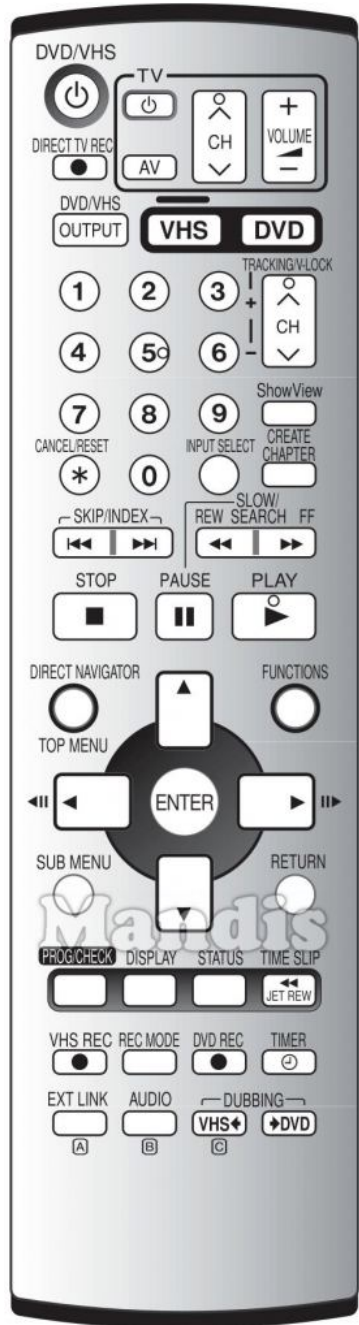




 
 

 







 





 





 



 

 

 



 

 

 

 


	Originale	Sostituto	Originale	Sostituto
TV	Power	Power		
AV	AV	AV		
+	Volume+	Vol +		
-	Volume-	Vol -		
CH +	CH+	Ch +		
CH -	CH-	Ch -		



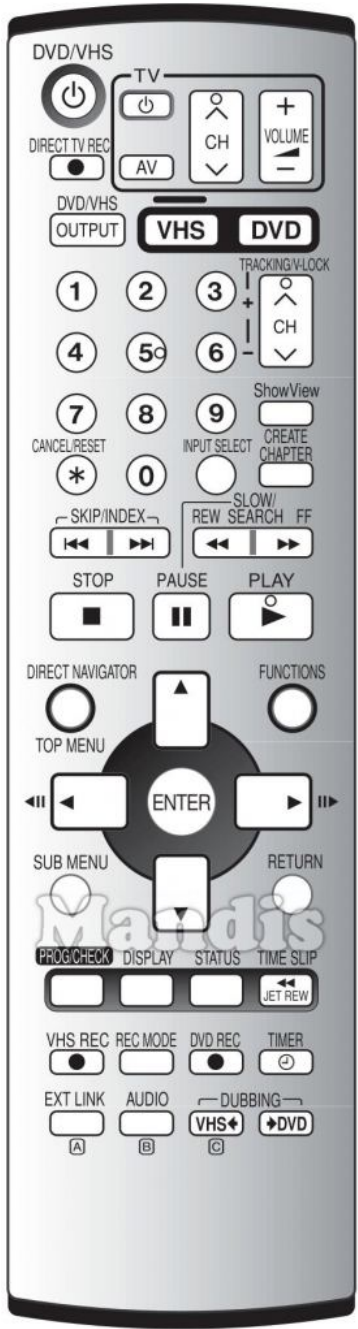 




Originale	Sostituto
 VHS/DVD Power	 Power
 Direct TV Rec	 Subt
 VHS/DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Cancel / Reset	 Exit
 Input Select	 AV
 CH+ / Tracking/V-Lock+	 Ch +
 CH- / Tracking/V-Lock-	 Ch -

Originale	Sostituto
 ShowView	 Media
 I<< Index	 I<<
 Index >>I	 I>>
 REW	 REW
 FF	 FF
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Return	 Back
 Prog/Check	 Sleep
 Display	 Info
 Jet Rew	 Shift + I<<





	Originale	Sostituto
VHS REC	Rec	Rec
REC MODE	Rec Mode	SHIFT + REC MODE Rec
TIMER	Timer	SHIFT + TIMER Shift + AV
EXT LINK	A / Ext Link	A Red
AUDIO	Audio / B	DUAL Dual
VHS+ DUBBING	Dubbing	E-MANUAL D.MENU D. Menu

	Originale	Sostituto

