 




 




 




 

 
 
 

 

 


 
 





 
 


 
 



 
 
 


 



 
 
 




 









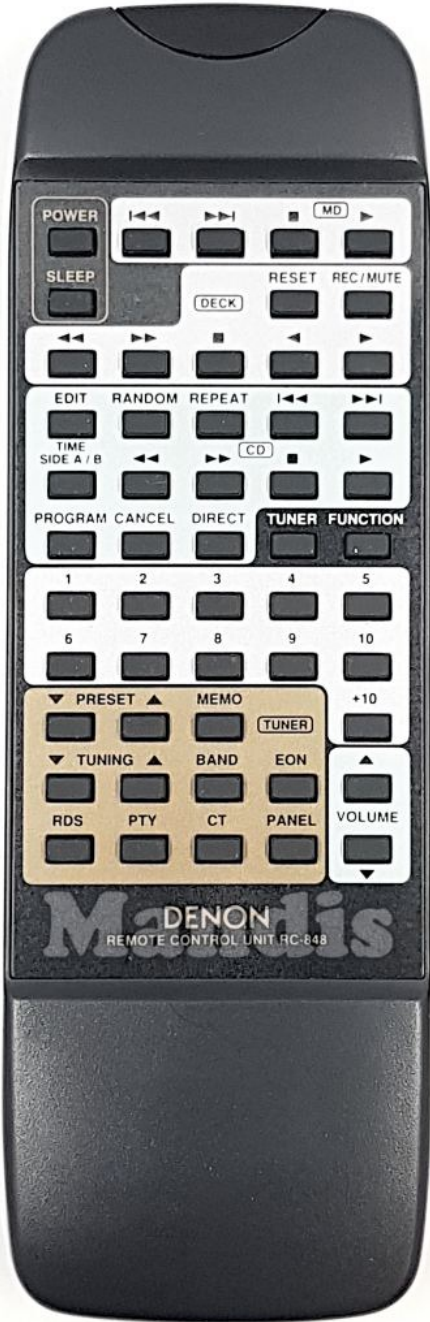 


Originale		Sostituto		Originale		Sostituto	
	Power		Power		Preset Up		Up
	Sleep		Sleep		Preset Down		Down
	Vol+		Vol +		Tuning Up		Ch +
	Vol-		Vol -		Tuning Down		Ch -
	Tuner		Smart		Memo		Options
	Function		Media		Band		TV/R
	1		1		Eon		Red
	2		2		Panel		Green
	3		3		CT		Yellow
	4		4		PTY		Blue
	5		5		RDS		Subt
	6		6		Play CD		Play
	7		7		Stop CD		Stop
	8		8		>>  CD		>>
	9		9		<< CD		<<
	10		0		>> CD		>>
	+10		Guide		<< CD		<<





Originale		Sostituto		Originale		Sostituto	
	Repeat		Text		Stop Deck		Ok
	Random		3D		1 CD		Shift + 1
	Edit		Dual		2 CD		Shift + 2
	Time Side A/B		AV		3 CD		Shift + 3
	Cancel		Exit		4 CD		Shift + 4
	Direct		Format		5 CD		Shift + 5
	Program		Shift + Sleep		6 CD		Shift + 6
	Play MD		Shift + Play		7 CD		Shift + 7
	Stop MD		Shift + Stop		8 CD		Shift + 8
	>>I MD		Shift + >>I		9 CD		Shift + 9
	I<< MD		Shift + I<<		10 CD		Shift + 0
	Reset		Back		+10 CD		Shift + Guide
	Rec Mute		Rec				
	>> Deck		Shift + Ch +				
	<< Deck		Shift + Ch -				
	< Deck		Left				
	> Deck		Right				

