
 










Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Off Timer	 Sleep / Timer
 Guide	 Guide / EPG / -/--
 Up	 Up
 Tv/AV	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [=]/Text	 Text / Goto

Originale	Sostituto
 [=◇]/F.P.	 Smart / List
 [=i]/Index	 Display / Media
 [=+]/Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 C	 Back / Return
 0/VCR	 0
 0/VCR	 Shift + 4
 i	 Info / Angle
 CH+	 CH+ / Page+





Originale	Sostituto
 Vol+	 Vol+
 CH-	 CH- / Page-
 Vol-	 Vol-
 [+]/Aspect	 Picture / Format
 N	 D.Menu / Top
 Power VCR	 Shift + Power
 Rec VCR	 Rec / Rec Mode
 Programme Down	 Shift + CH- /
 Programme Up	 Shift + CH+ /
 << VCR	 << / Tune-
 >> VCR	 >> / Tune+
 Stop VCR	 Stop / Hold
 Pause/Step VCR	 Pause / Step / Freeze
 Play VCR	 Play / Slow

Originale	Sostituto



