





 

 






Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Off Timer	 Sleep / Timer
 Guide	 Guide / EPG / -/--
 Up	 Up
 Tv/AV	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [=]/Text	 Text / Goto

Originale	Sostituto
 [=◇]/F.P.	 Smart / List
 [=i]/Index	 Display / Media
 [=+]/Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 C	 Back / Return
 0/VCR	 0
 0/VCR	 Shift + 4
 i	 Info / Angle
 CH+	 CH+ / Page+





Originale	Sostituto
Vol+	Vol+
CH-	CH- / Page-
Vol-	Vol-
[+]/Aspect	Picture / Format
N	D.Menu / Top
Power VCR	Shift + Power
Rec VCR	Rec / Rec Mode
Programme Down	Shift + CH- /
Programme Up	Shift + CH+ /
<< VCR	<< / Tune-
>> VCR	>> / Tune+
Stop VCR	Stop / Hold
Pause/Step VCR	Pause / Step / Freeze
Play VCR	Play / Slow

Originale	Sostituto





Originale	Sostituto
Power DVD	Power
Rec DVD	Rec / Rec Mode
Programme Down	CH- / Page-
Programme Up	CH+ / Page+
I<< DVD	I<< / Preset-
>>I DVD	>>I / Preset+
Stop DVD	Stop / Hold
Pause/Step DVD	Pause / Step / Freeze
Play DVD	Play / Slow

Originale	Sostituto

